

ALUMINUM OUTSIDE FRAMES

ONE COMPLETE SET

HUBBELL


GLASS WINDOWS FOR FORDS

(PATENT PENDING)

**NO WEIGHT ON CURTAIN
TO CAUSE SAGGING AND TEARING**

The weight is carried on the top bow of the car with a web strap, fastened with a metal clip.

**FOR REPLACING CELLULOID IN REAR CURTAIN
CLEAR REAR VISION PROTECTION AGAINST WEATHER**

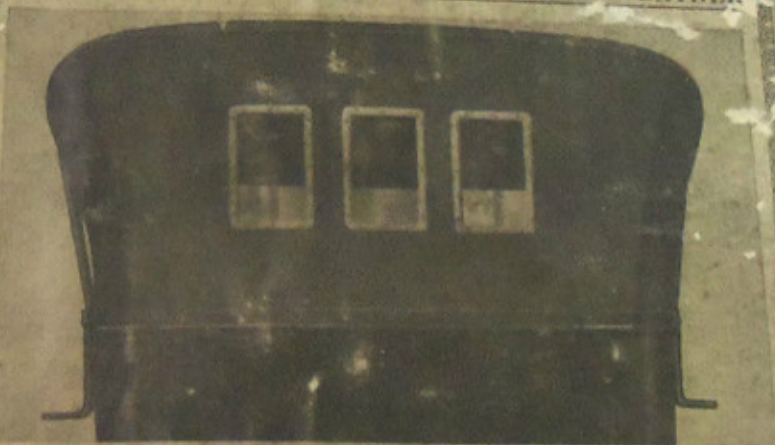

EASILY ATTACHED BY ANYONE WITHOUT REMOVING CURTAIN
Fit present openings of 1917 to 1922 models. Glass is enclosed in metal frames which clamp securely to the reinforced binding of the curtain, one on each side.

DIRECTIONS FOR ATTACHING—Hold a frame against outside of curtain, starting with right opening. With a nail punch left and right holes at top through curtain. Do not remove seams around openings. Place another frame from inside, and bolt together. Insert glass between the two frames, punch holes at bottom and sides and put in screws as each hole is made. Do not tighten nuts until all screws have been placed.

Place cyclist of web strap over top center screw on inside and tighten nut. Hold other end against top bow of car, place clip against it, push back until web lays flat against curtain, and fasten clip with small nail.

Attach the middle and left windows in the same manner.

We guarantee these Windows to be thoroughly high grade and free from imperfection.

THE HUBBELL MANUFACTURING COMPANY
CLEVELAND, OHIO

BLACK ENAMEL FRAMES



ARTISTICALLY DESIGNED

EXCELLENT FEATURES WHICH ENSURE SUPERBITY


The frames are unexcelled, neat and distinctive, with elegant lines of outward, away from windows, to prevent snagging and cutting in. Close-fitting to reinforced leading of glass will in case of breakage, with safety fasteners, screws and nuts. No canvas tape when attaching. Locks used between head and corner sections of frame, with lightning screws. Maximum glass area. Test quality after glass is set.

CLEAR REAR VISION



HUBBELL
GLASS WINDOWS

FOR FORDS

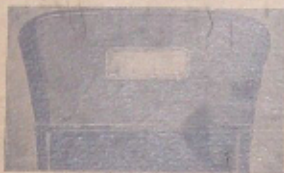

Easily Attached Without Removing Curtain
SCREW DRIVER ONLY TOOL REQUIRED



SCIENTIFICALLY CONSTRUCTED

DIRECTIONS FOR ATTACHING

Get out all included. DO NOT REMOVE STAINS AROUND OPENING. Hold a frame against the window, on outside of curtain and with a nail or tin pack, push the left and right bolts at top through the curtain. Then other frame from inside and bolt together with nuts on the inside. Push holes of bottom and sides and put in screws on each side in order. Insert glass from the top between the two frames. Push mounting clips and put in screws at top. Do not tighten clips and screws until all boys are placed and the glass is in center of frame.

PROTECTION AGAINST WEATHER



HUBBELL MANUFACTURING COMPANY

1274 ADDISON ROAD

CLEVELAND, OHIO

